

 
Installation and operation manual

Flat



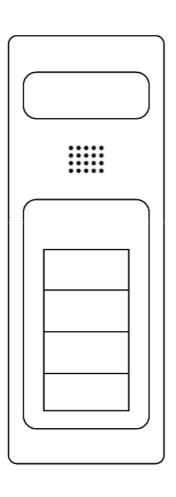

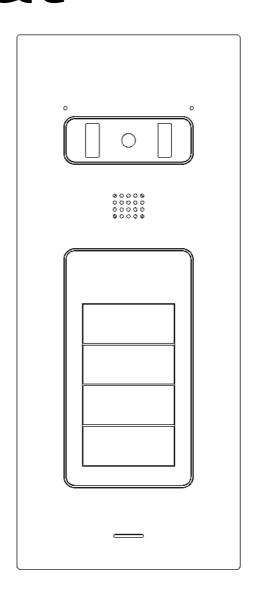

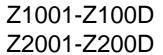

INFINITEPLAY

FLAT

DESCRIPTION:

Audio-video entrance panel for INFINITEPLAY video door entry systems.

ENTRANCE PANEL INSTALLATION ART . Z1001 - Z100D

Installing from semi-surface mounted:

- Install a flush box of universal type (InfinitePlay ZT503 Vimar V71303 Bticino 503E) in vertical position at a height of 160 cm from the floor to the top edge, as shown in the figure.
- Fix the chassis frame to the box using the 2 +4 screws
- Insert the card names and close the lid
- Wire the electronics assembly as shown through the RJ45 connector
- Secure the plate using the 4 screws to the chassis frame
- Compatible with flush-mounted back box Elvox Art 9192 and Art Vimar 02011

PLEASE NOTE: The equipment must be directly and permanently mounted on a non-combustible surface such as concrete and metal. Supports or materials with poor self-extinguishing requirements must be excluded.

Description connection terminal block:

- · Line entrance panel with RJ45 connector
- Interconnecting cables used must be UL certified and must be compliant with the CEI 64/8 for video door entry systems:
- UTP CAT 5e for domestic routes dedicated to video door-phone system
- FTP CAT 5e shared routes with tension cables
- UTP CAT 5e for outside with protective sheath in PVC


All cables muste be LSZH for Low Smole Zero Halogen

Technical characteristics:

- Brushed stainless steel exterior AISI 316 with ABS frame and glass parts are made from ultra-strong, scratch-proof.
- Ready to install semi-surface mounted wall with metal coupling
- •The night light is ensured by 4 efficiency LED
- LCD Display 4.3 " and presence sensor in Art. Z100D
- Standby power consumption 7 mA, in conversation: 150mA
- Operating Temperature : -20 ° to 50 ° C
- Dust and Water Resistant Rating IP54
- Size : 262x95x19 mm

Maintenance:

Clean the entrance panel using a soft cloth. Do not use any type of chemical product.

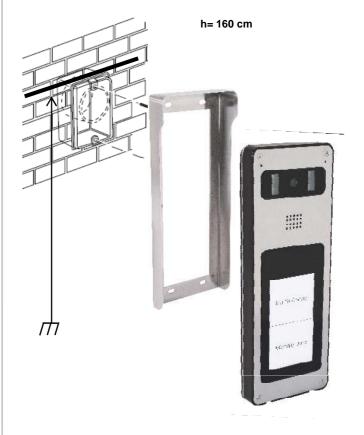





DESCRIPTION:

Audio-video entrance panel for INFINITEPLAY video door entry systems.

ENTRANCE PANEL INSTALLATION

ART . Z2001 - Z200D

Installing from flush mounted:

- Install back box Art. Z9092 in vertical position at a height of 165 cm from the floor to the top edge, as indicated in the figure.
- Secure the pick springs to the back box using the 4 nuts M3, keeping them aligned plumb with the finish of the exterior wall
- Insert the card names and close the lid on Z2001
- Wire the electronics assembly as shown through the RJ45 connector
- Place the product FLAT within their back box by pressing on the high and low part of it to facilitate the automatic interlocking.

PLEASE NOTE: The equipment must be directly and permanently mounted on a non-combustible surface such as concrete and metal. Supports or materials with poor self-extinguishing requirements must be excluded.

Removing the FLAT external unit Z2001 - Z200D:

Take the two keys release in the package

1)Insert the key release in the slot (shown in the picture) and press

2)Pull out the product FLAT external unit Z2001 - Z200D

Description connection terminal block:

- Line entrance panel with RJ45 connector
- Interconnecting cables used must be UL certified and must be compliant with the CEI 64/8 for video door entry systems:
- UTP CAT 5e for domestic routes dedicated to video door-phone system
- FTP CAT 5e shared routes with tension cables
- UTP CAT 5e for outside with protective sheath in PVC


All cables muste be LSZH for Low Smole Zero Halogen

Technical characteristics:

- Brushed stainless steel exterior AISI 316 with ABS frame and glass parts are made from ultra-strong, scratch-proof.
- Ready to install flush mount wall with metal coupling
- •The night light is ensured by 4 efficiency LED
- LCD Display 4.3 " and presence sensor in Art. Z200D
- \bullet Standby power consumption 7 mA , in conversation : 150mA
- \bullet Operating Temperature : -20 $^\circ$ to 50 $^\circ$ $\,$ C
- Dust and Water Resistant Rating IP54
- Size : 310x130x2 mm

Maintenance:

Clean the entrance panel using a soft cloth. Do not use any type of chemical product.

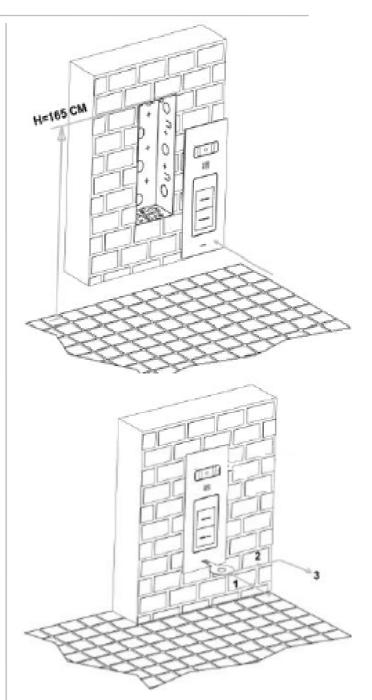


To remove the Entrance Panel use the appropriate extraction key.

Before re-install the Entrance Panel, close the slot using the appropriate

stopper, positioning it from the back, as shown in picture below.

 Attention: without the stopper the Entrance Panel loses the IP54 class and could be subject to water and dust ingress!

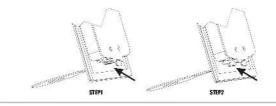





MATERIAL NEEDED:

1 skein of CAT5 Ethernet cable UL certified

Connectors RJ45 plug UL certified

- 1 scissor
- 1 crimping tool 8-pin


Recommended a tester for checking LAN cables


MAKE A STRAIGHT CABLE

PIN	Code color T568B	
1		White orange
2		Orange
3		White green
4		Blue
5		White blue
6		Green
7		White brown
8		Brown

PROCEDURE:

- 1) SKINNING CABLE (25-30 mm)
- 2) ORDER cable as shown and line-up , cutting the connectors with scissors at the same height (about 10mm)
- 3) INSERT THE CABLE IN CONNECTOR RJ45 as shown in figure
- 4) CRIMPING WIRE with clamp
- 5) FINAL CHECK OPERATION with tester

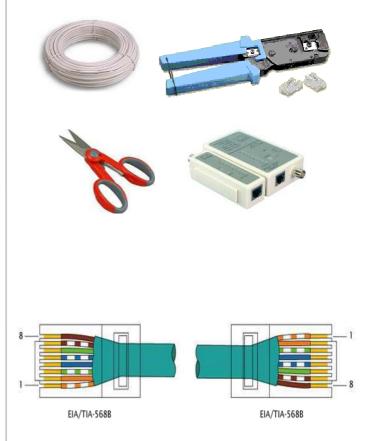

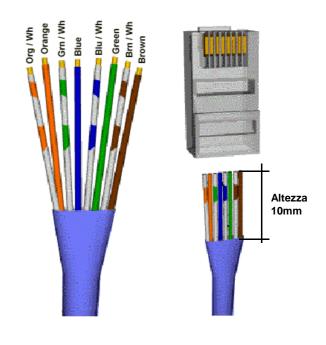





SYSTEM PROGRAMMING

There are two types of configurations:

- 1) Using an internal video door when you first start is recommended for small building
- 2) For systems of higher dimensions can be a system configuration from a PC by software

To be connected PC to any RJ45 port of InfinitePlay system by patch cords.

IIP SETUP INSTALLER:

KEY PASSWORD: 000000

Setup by video door phone

VIDEO DOOR PHONE ID (ten digit code):

Building 01 Floor 103 Apartment 050 Internal device 04

PHASES OF CONFIGURATION:

The configuration steps of the system are divided into only 5 points:

1.BASIC SETTINGS 2.ENTRANCE PANEL 3.POWER SUPPLY 4.VIDEO DOOR PHONE **5.MAPPING ENTRANCE PANEL**

1. BASIC SETTINGS

To be programmed the basic parameters for system

CONCIERGE (yes/no) SOS PANIC BUTTON (yes/no) VIDEO DOOR PHNE VISIBILITY SYSTEM(all video intercom device/ only master video intercom device)

SYSTEM SETTING TIME (GMT 00)

SETUP INFINITEPLAY SYSTEM LANGUAGE

CHANGE PASSWORD OF SYSTEM (default 000000)

2. ENTRANCE PANEL

To be programmed all parameters of entrance panel in the system

IDENTIFICATION NUMBER (Mac address out door unit)= B4669800F3

CUSTOM ID NUMBER: from 1 to 200 unit

NAME ENTRACE PANEL: Regent St

SUBTYPE: Choose the subtype of call (1-4 touch buttons, list on LCD display, buttons on LCD display)

ANSWER TIME (1 to 255 s)

Default value 30 s

CONVERSATION TIME (1 to 255 s)

Default value 120 s

SELF-START TIME(1 to 255 s)

Default value 30 s

AUDIO INDOOR-OUTDOOR (0% to 100%)

Default value 50%


ENTRANCE PANEL RINGTONE REPETITION (yes / no)

Default value is yes


SAVE SETTINGS BEFORE YOU GET OUT OF SETUP





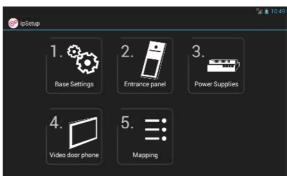



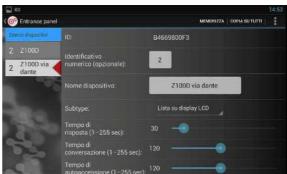

BACK SAVE Entrance panel



3. POWER SUPPLY

A video door phone INFINITEPLAY system can contain only one server SIP Z6001 and several distributors Z60DT

IDENTIFICATION NUMBER = 0000000000

DEVICE NAME: es: Z6001 Main elettrical panel

OUTPUT

FUNCTION:

To be assign one of the following functions that appear in the video intercom. If you have an "X" the function is disabled.

CODE:

You can assign an identification number to each OUTPUT activated by outdoor unit with display. code set preceded by # symbol (eg. # 123)

TIMEOUT:

The time of OUTPUT can be programmed

TIME LOCK: (from 1 to 30s) default value 1s TIME AUX1: (from 1 to 30s) default value 1s TIME AUX2: (from 1 to 30s) default value 1s TIME AUX3: (from 1 to 30s) default value 1s

ENTRANCE PANEL:

Through "entrance panel" binds the selected function to one or more entrance panel present in the system.

To a call from entrance panel will be displayed one priority function.

LINK:

This parameter enables indirect opening of the lock, at the same time as the opening of the lock of another entrance panel, at the command of an interphone/monitor interphone. Indirect opening can be associated with different entrance panels.

For example: LOCK type Z6001 (1) with LOCK type Z60DT (2).


When you press lock push button, will operate both entrance panel at same time by their respective power supplies.

INPUTS

Module type Z6001 receives the command from four N/O push button and when closing, they send the messages to output. (ex. Light stair push button)


INPUT CALL allows you to make a call from an entrance panel to an indoor video door phone.



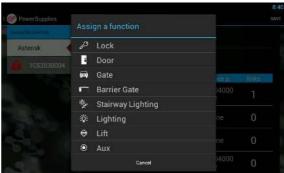





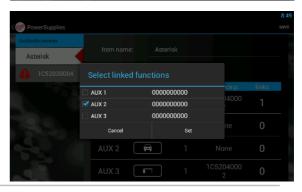

SAVE SETTINGS BEFORE YOU GET OUT OF SETUP





4. VIDEO DOOR PHONE

At the first installation is requested the physical position of the device:

PROGRAMMING ID IDENTIFICATION CODE

Building 01 Floor 103 Apartment 050 Internal device 04

In the INFINITELAY kits the monitor ID CODE: 01 000 001 00

USER NAME: (ex. Famili Briyan)

The name will appear in the display entrance panel Art.Z100D – Z200D The name will appear in the intercom contacts

VISIBILITY ENTRANCE PANEL:

You can select the list of entrance panels that can call this device. Default all entrance panels call everyone users

FILTER FUNCTIONS AVAILABLE:

At the request of a end user, you can disable an auxiliary function that is also used by other residents

VISIBILITY VIDEO DOOR PHONE:

With this function you can define the visibility of the indoor unit intercom 1) INTERNAL INTERCOM CALLS

Select the list of all internal devices apartment that you can call 2) EXTERNAL INTERCOM CALLS

Select the list of the internal intercom of the building that you can call

DOCTOR MODE: (yes/no)

When a call comes in this monitor sends the command lock automatically on power supply.

AUTO ANSWER: (yes / no)

By activating this function, the indoor unit will enter into conversation with the outdoor unit automatically after a few seconds

INTERCOM GROUPS:

With this function you can define a group of calls by choosing the origin of the call. (Eg. To join an indoor unit slave with his master)

- 1) TO CALL FROM EXTERNAL UNIT
- 2) TO CALL FROM INDOOR UNIT INTERNAL TO THE APARTMENT
- 3) TO CALL FROM INDOOR UNIT EXTERNAL TO THE APARTMENT

ECHO CANCELLATION:

With this function you can choose the degree of noise cancellation of your INDOOR UNIT device InfinitePlay.

- 1) Normal (recommended by the factory)
- 2) hard
- 3) strong

 










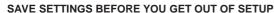





5. MAPPING ENTRANCE PANEL

ENTRANCE PANEL SETUP

Select the entrance panel to set their parameters (touch push button or display)

ENTRANCE PANEL TOUCH BUTTONS Z1001-Z2001

If in the presence of a outdoor unit touch buttons must be set: TOUCH BUTTONS 1 call the indoor unit 01000001000 - Famili Briyan

ENTRANCE PANEL TOUCH DISPLAY Z100D-Z200D

If in the presence of a outdoor unit display must be set:

PROPERTY LOGO: In JPG format

PANEL RINGTONE REPEAT (sound/ring.mp3) suggested

VOLUME ENTRANCE PANEL (from 0% to 100%)

Default value 20% suggested

STAUTS MESSAGE (yes/no)

If you set YES the entrance panel show messages (Calling, in conversation, door lock opened, end the conversation)

ENABLE ANIMATION (yes/no)

With this function activates an animation in the outdoor unit display that ease the visitor in the use of the outdoor device

SHOW CODE BUTTON (yes/no)

Using this function enables the possibility to activate an automation from the outdoore unit by code (ex.#123)

ENABLE RECEPTION BUTTON (yes/no)

With this function you enable a button dedicated to the call of concierge station.

BUILDING NAME: (ex.Residence Argenta)

STREET NUMBER: (ex. 26 2B)


WELCOME MESSAGE

ALTERNATION MESSAGE

TIME ALTERNATION: Settable in seconds





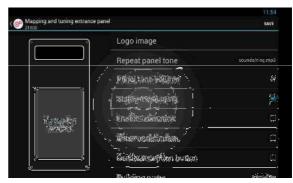











1

OPERANTING ISTRUCTIONS

1. FUNCTION BAR (BUTTONS ON THE RIGHT)

HOME RETURN SETUP SEARCH

2. VIDEO DOOR PHONE WIDGET

LOCK LIGHT STAIR GATE

3. DATA AND TIME

4. METEO (with internet connection)

5. VIDEO DOOR PHONE FUNCTION

Available to the call (green symbol)

Do not disturbe (red symbol, choose how long)

ANSWERING A CALL

1.VIDEO DOOR PHONE FUNCTION 2.TO END THE CALL 3.MUTE MICROPHONE 4.TO ANSWERING A CALL

IPCALL VIDEO DOOR PHONE APP

1.VIDEO DOOR PHONE FUNCTION 2.CONCIERCE LIST INTERCOM CONTACT LIST ENTRANCE PANEL LIST LOG ACTIVITIES 3.SETUP / AUDIO SETTINGS

MESSAGING

TO SEND TEXT MESSAGES AND FILES (JPG - PDF) FROM MONITOR TO CONCIERCE AND FROM CONCIERGE TO MONITOR

THE COMMUNICATION IS ABLE BETWEEN INTERNAL MONITOR AND CONCIERCE



3

4

1

2

5



2

3

4

3

Seneria

Seneria

Contatti

Agrico De Rej

Demanico Ambrosi

Elena Sonzagino

Maria Grazia Ole:

2







OPERATION:

Important: For the monitor operation, the ID must have already been pro- grammed. To check this, in all devices

Operating times

The answer and the conversation times depend on the configuration of the corresponding entrance panel parameters.

- Answer time (for entrance panel call): Default value 30 s
- Answer time (for intercommunicating call): 30 s
- Conversation time (for entrance panel call): Default value 120 s
- Self-activation time (for entrance panel call): Default value 30s

Answering a call

A call from the outdoor entrance panel or from an intercommunicating device can be answered during the chime cycle or once it has ended. To answer, press green push button; to end the call, press red push button.

Receiving a door call

The monitor can receive calls from a door call button if connected to terminals M and FP directly When the door call button is pressed, the monitor emits a different tone to the one used for outdoor entrance panel calls or intercommunicating calls.

Making an intercommunicating call

To make a call to another indoor unit, is neccessary to open the videodoor phone app and choose the name to the contacts list.

Muting the ringtone during a call (Mute function)

When receiving a call from an outdoor entrance panel or from an intercom device, the call ringtone can be muted by pressing button MUTE in home page widget. You can set the mute time (for example 30 minutes)

Door lock command

If you press the lock button by home page widget to send a lock opening command to the entrance panel. The lock is connect to the power supply for security

Self-start

The videodoor phone is able to recognize the entrance panel or CCTV cameras.

From the entrance list you can make a self-start function for monitoring and conversation.

Calling a concierge station

Form the concierge list you can call the concierce service (lobby, managment office, guard office)

Alarm and Panic buttons

The monitor can sand two alarms to Concierce station Connecting a button dirctly to terminals M and AL, you can sand an alarm (gas detector, smoke detector) to concierge If connecting a button dirctly to terminals M and P, you can sand an panic alarm to concierge . This function is able from widget SOS

Choice a ringtone

Through the settings you can choose between different electronic ringtone.

Ringtone volume adjustment

Through the settings you can choose between different volume levels plus mute.















SINGLE RESIDENCE SYSTEM WITH 7" VIDEO DOOR PHONE AND ONE AUDIO-VIDEO ENTRANCE PANEL

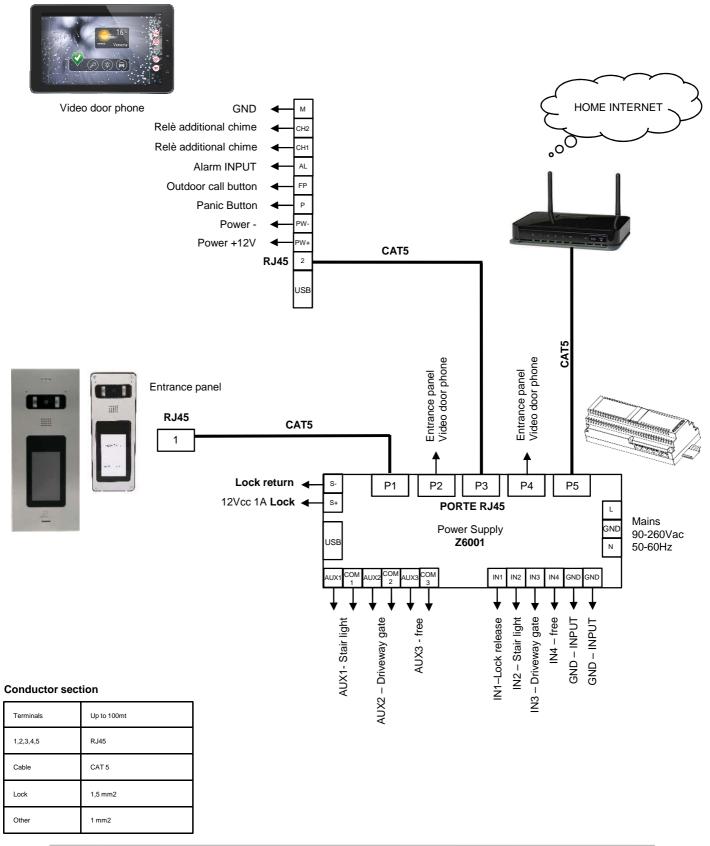






DOUBLE RESIDENCE SYSTEM WITH 7" VIDEO DOOR PHONE AND ONE AUDIO-VIDEO ENTRANCE PANEL

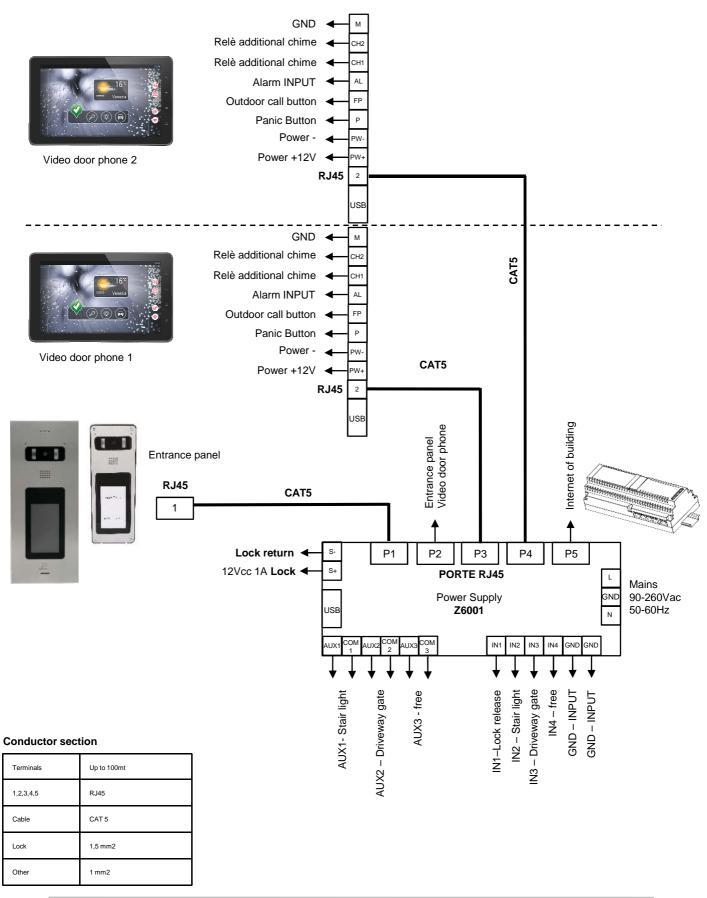






DOUBLE RESIDENCE SYSTEM WITH 1 VIDEO DOOR PHONE, 2 VIDEO DOOR PHONES WITH INTERNET CONNECTION AND ONE AUDIO-VIDEO ENTRANCE PANEL WITH TWO PUSH BUTTONS

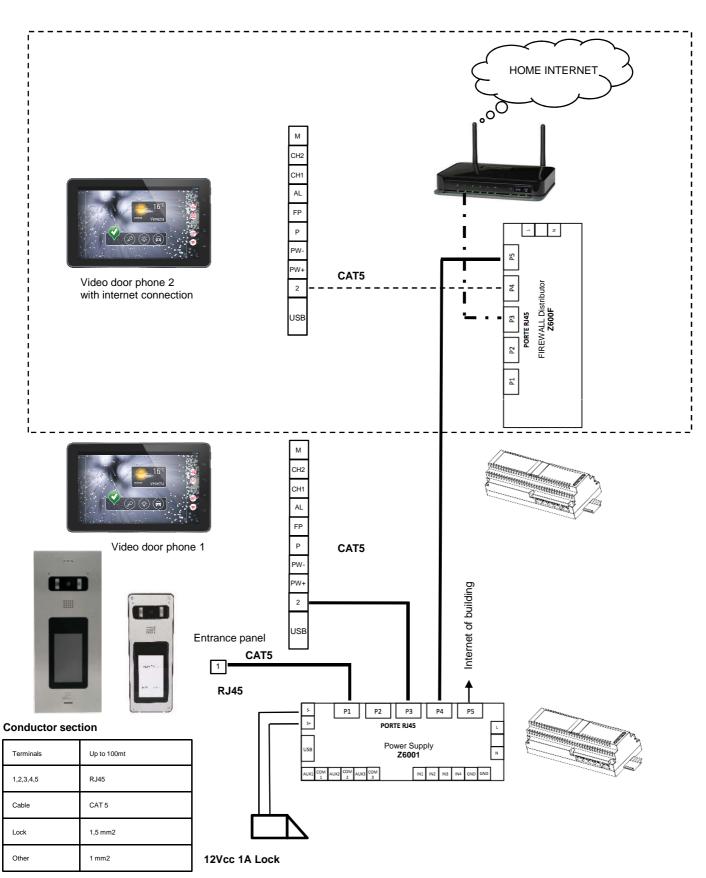






MULTIPLE RESIDENCE SYSTEM WITH ONE AUDIO-VIDEO ENTRANCE PANEL, POWER SUPPLY, DISTRIBUTOR AND 12 VIDEO DOOR PHONES

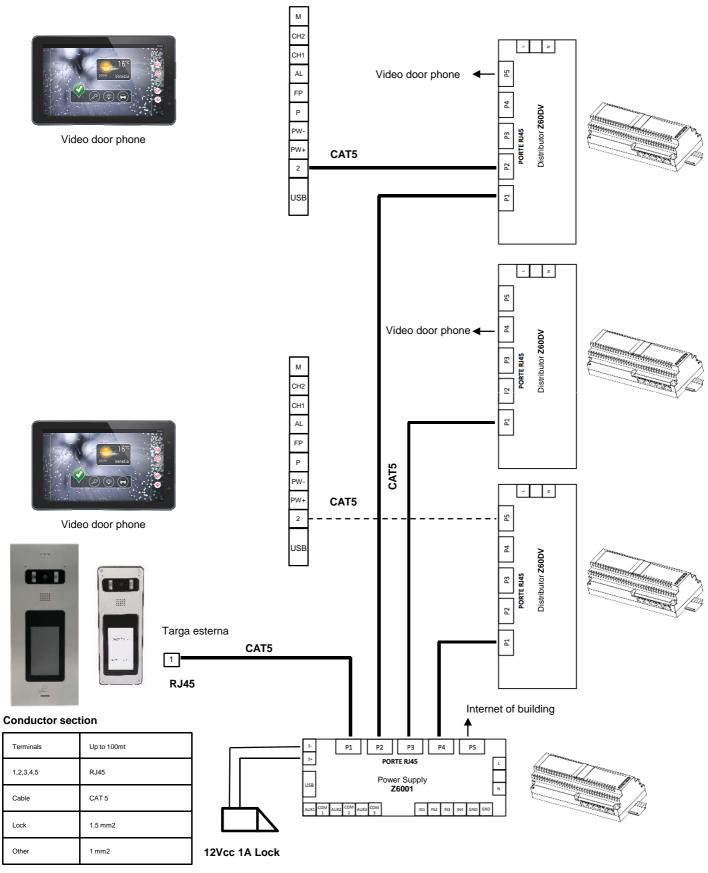




BUILDING COMPLEX SYSTEM WITH TWO AUDIO-VIDEO ENTRANCE PANELS, POWER SUPPLY, CONCIERGE STATION AND DISTRIBUTOR

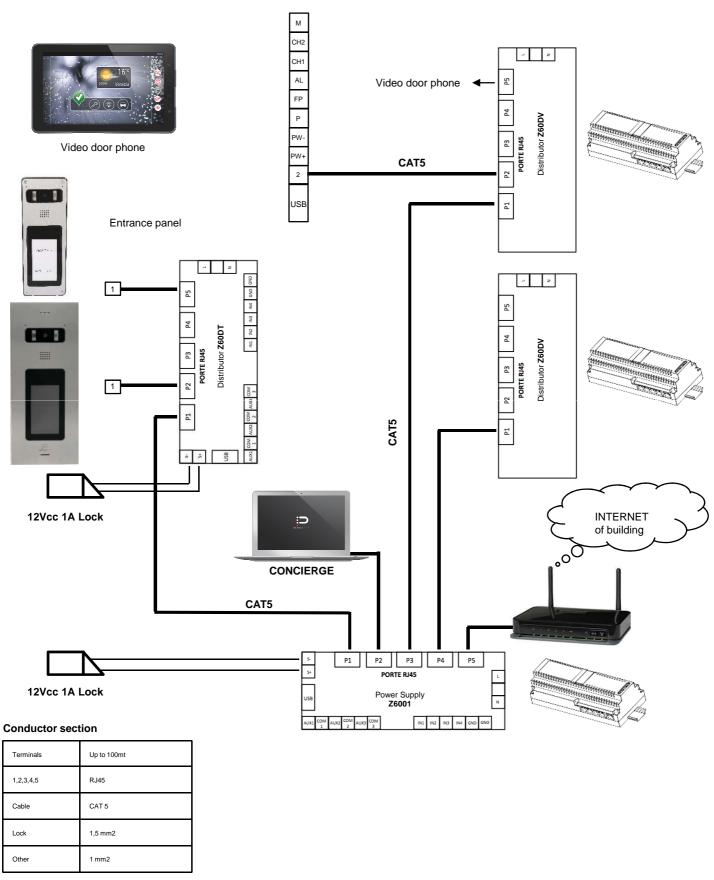






CONNECTION VARIANTS:

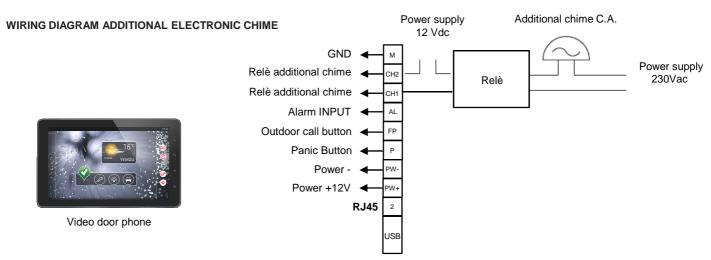



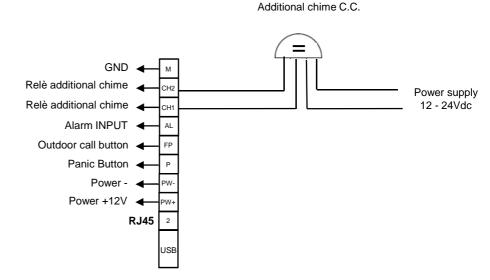


Video door phone

WIRING DIAGRAM DOOR CALL BUTTON



Video door phone

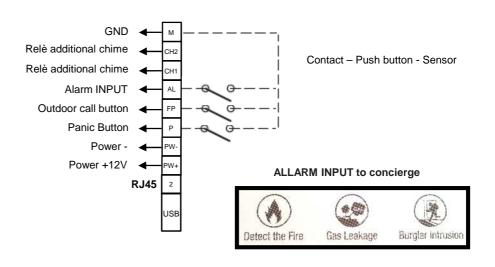







CONNECTION VARIANTS:

WIRING DIAGRAM DOOR RELESE CONTROL

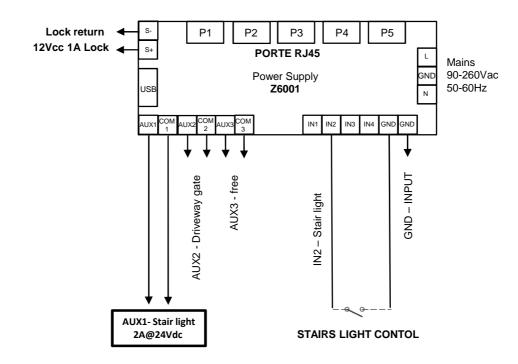

WIRING DIAGRAM DOOR RELESE CONTROL

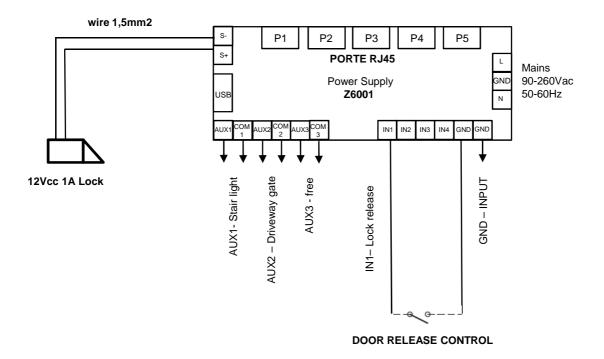





INSTALLATION NOTE:





Directive 2012/19/UE (WEEE)

The crossed-out wheelie bin symbol marked on the product indicates that the product must be assigned to a differentiated collection centre for electrical and electronic equipment or returned to the dealer to purchase a new product.

For further details regarding the collection systems available, contact your local waste disposal service.

The user is responsible for assigning the equipment purchased, to the appropriate collection facilities.

Risks connected to substances considered as dangerous (WEEE).

According to the WEEE Directive, these electrical and electronic products contain harmful substances for people and the environment.

It is obligatory treat the recycling of the materials in such way to avoid negative impacts on the environment and people's health.

Adaptation to current regulations allows a correct recycling of which the product is made.



SAFETY INSTRUCTIONS FOR INSTALLERS

This equipment is used in video door entry and home & building automation systems.

The instructions in this document provide important information about safety, installation, use and maintenance of the product.

Verify that the equipments are undamaged, after purchase.

The packaging contains potential dangerous sources for children (screws and dowels).

The installation must respect the current CEI regulations.

It is necessary to install to the power sypply a protection bipolar type switch to video door entry system.

Before connecting this equipment verify the output voltage supplied from the distribution network.

Before performing maintenance operations, disconnect the device.

In case of failure or malfunction, disconnect the device and contact the technical assistance centre.

Do not obstruct opening of ventilation or heat exit slots.

The protection bipolar type switch must be located in the main framework of the House.

WARNING:

This equipment must be fixed to the wall according to the installation instructions.

This leaflet must always be attached to the system documentation.



Product is according to EMC Directive 2004/108/EC, LVD 2006/95/EC and RoHS 2011/65/EU.



This product is Listed by UL. Representative samples of this product have been evaluated by UL and meet applicable safety standards. Product is according to UL60950-1 2nd Edition + A1 + A2.

Product is according to IEC 60950-1 2nd Edition + A1 + A2.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class[B] device complies with ICES-003 Issue 5.

CAN ICES-3 (B)/NMB-3(B)





InfinitePlay S.r.I.

Via Monte Grappa, 25 31020 Villorba (TV) ITALY Tel. 0422 350680 Fax. 0422 446958 www.infiniteplay.com

